


QUIK-SHIELD

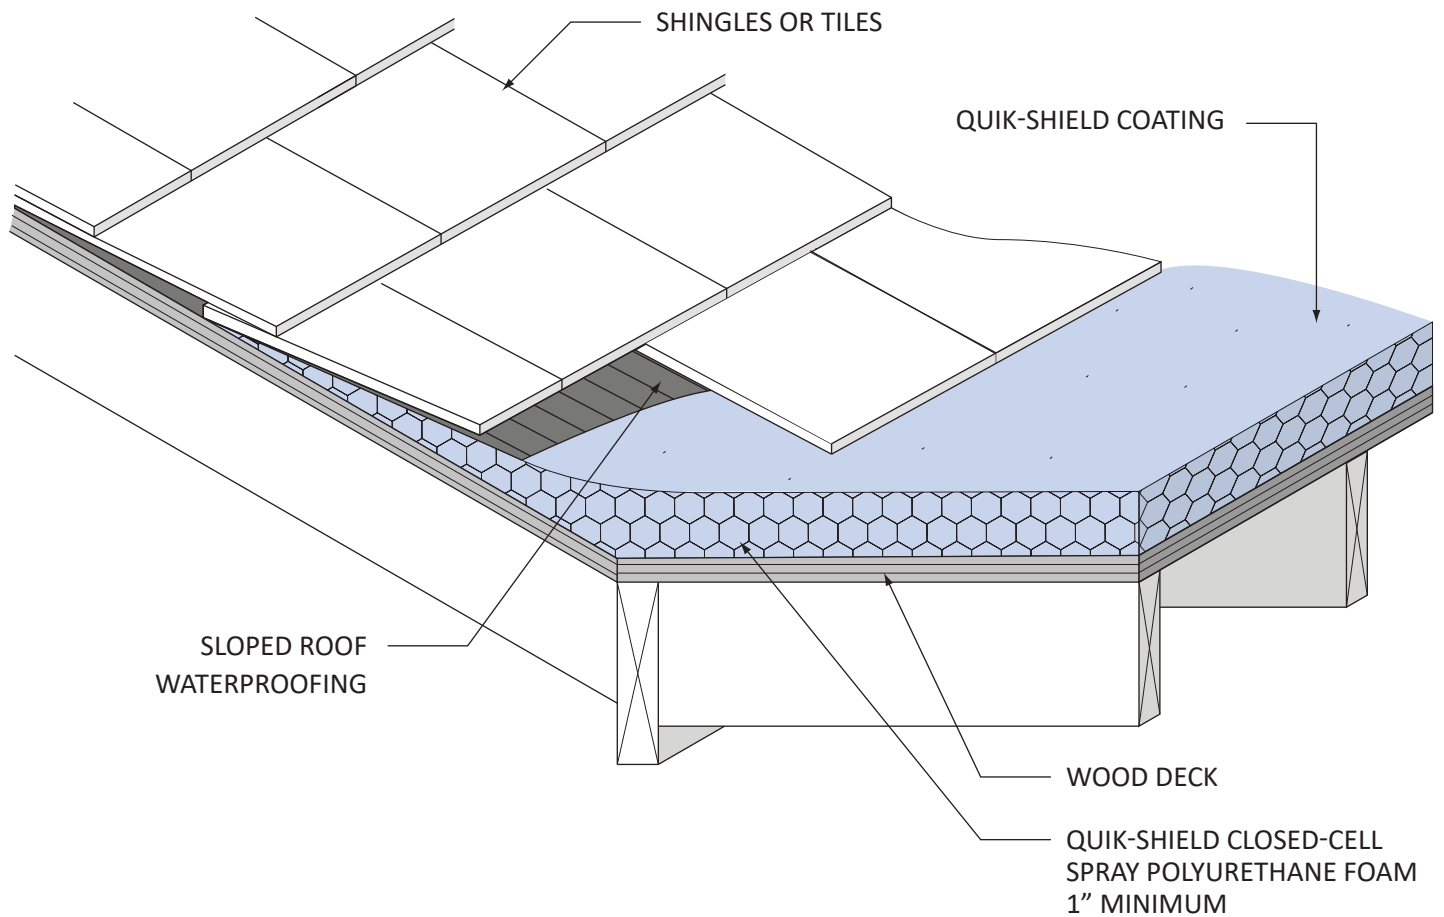

NOTE:
SPRAYED POLYURETHANE FOAM MUST BE APPLIED BENEATH THE SLOPED ROOF WATERPROOFING

FLAT ROOF TO SHINGLE OR TILE TIE-IN

QSR-111 09-2018

SWD **SWD Urethane**
Mesa, AZ • 800-828-1394 • swdurethane.com